



*Environmental Systems, Inc.*

## DB9 Connector Wiring

DB9 Cable Pinout			Controller Connections		
RS-232	RS-485	Signal	96 Controller	F4 Controller (RS-232)	F4 Controller (RS-485)
Pin 5	Pin 5	Common	20	16	16
Pin 3	Pin 2	Receive	21	15	12
Pin 2	Pin 1,7,8	Transmit	19	14	13

\*a

\*b

- \*a. Tie Pins together at DB9 connector  
1, 4, 6 and 7, 8
- \*b. Tie pins together at DB9 connector  
1, 7 and 8

